

Уплотнения поршня

PISTON SEALS									
	K01-P		K01-PE		K01-R		K01-RE		
	K02-P		K02-PD		K02-R		K02-RD		K03-P
	K03-F		K03-S		K04-R		K04-PD		K05-P
	K05-R		K06-P		K06-R		K07-P		K07-F
	K08-E		K08-ES		K08-D		K08-DS		K08-P
	K09-M		K09-H		K09-D		K09-F		K1012-T
	K012-M		K1315-T		K16-A		K16-B		K17-P
	K17-R		K19-F		K20-R		K21-P		K22-P
	K22-R		K23-N		K23-H		K23-D		K23-F
	K24-P		K32-P		K35-P				

Уплотнения штока

ROD SEALS									
	S01-P		S01-R		S02-P		S02-PD		
	S02-R		S02-RD		S02-S		S03-P		S03-F
	S03-S		S04-P		S04-PD		S07-F		S05-R
	S06-P		S06-R		S07-P		S07-F		S08-P
	S08-PE		S08-R		S09-E		S09-ES		S09-D
	S09-DS		S09-P		S1012-T		S1012-M		S1315-T
	S16-A		S16-B		S17-P		S17-R		S18-P
	S18-R		S19-F		S20-R		S21-P		S22-P
	S22-R		S24-P		S2527-F		S2931-F		S32-P
	S35-P								

Грязесъемники

WIPERS									
	A01-A		A01-B		A01-A		A02-B		
	A02-I		A03-A		A04-A		A04-B		A05-A
	A05-B		A05-I		A06-A		A07-A		A08-A
	A08-B		A09-A		A10-A		A11-A		A11-I
	A12-A		A12-B		A13-A		A25-F		A26-F
	A27-F								

Роторные уплотнения

ROTARY SEALS									
	R01-P		R01-R		R01-AF		R01-AS		
	S01-F		R02-P		R02-R		R03-P		R03-R
	R04-A		R05-A		R06-P		R06-R		R07-P
	R07-R		R08-A		R09-F		R09-FS		R10-F
	R10-FS		R11-F		R12-F		R13		R14
	R-15		R-16		R19-F		R20-P		R30-A
	R35-A								

Направляющие кольца

GUIDE RINGS							
	F01		F02		F03		F04
	F05		F06		F07		F08

Опорные кольца

BACK-UP RINGS							
	ST08		ST09		ST10		ST11
	ST12		ST13				